



Wiring Diagram - Tri-Spark Classic Twin Positive Earth and One 12 Volt Coil

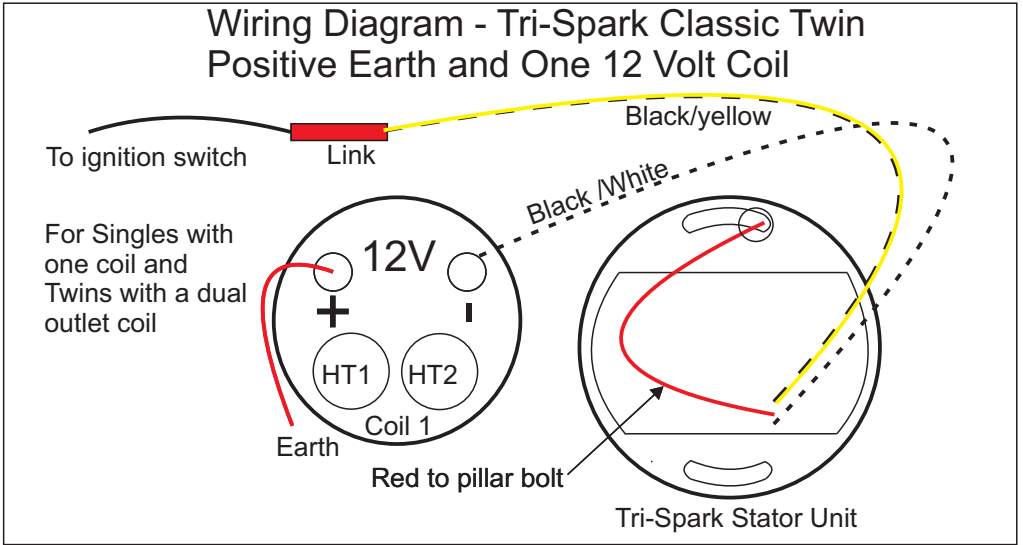

Wiring Diagram - Tri-Spark Classic Twin Negative Earth and One 12 Volt Coil

Note: The terminals for the Red and Black/Yellow wires must be swapped

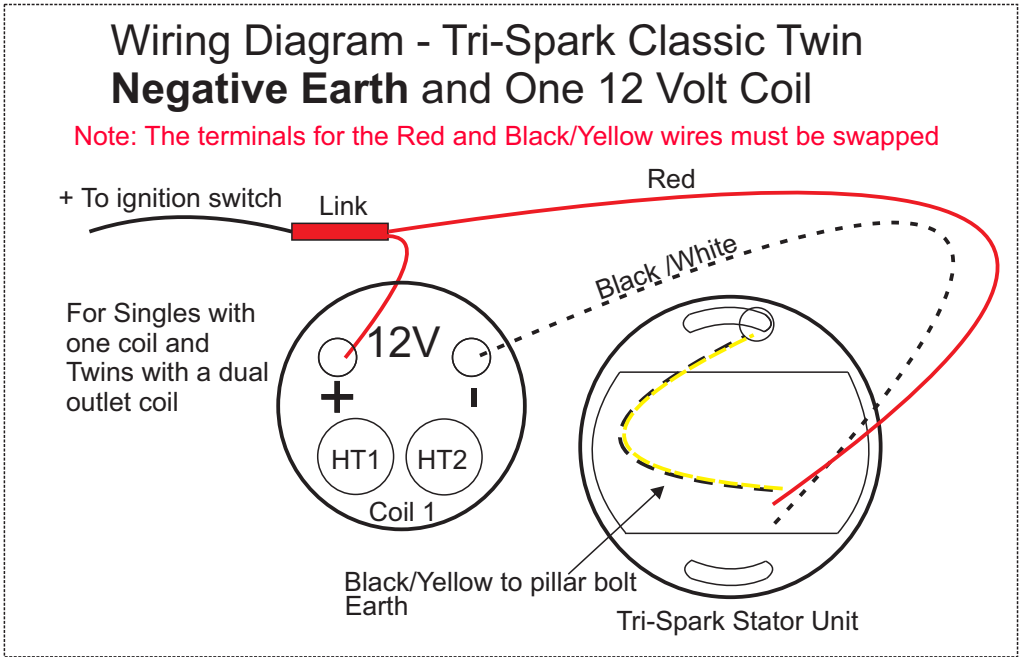

Note: 'To ignition switch' means make connection with the wire intended for switching the ignition on/off at a convenient point. This is often a white/yellow wire that was originally connected to the negative side of the ignition coil(s) when running on points. Normally this connection is switched by the ignition and kill switches.