


Wiring Diagram - Tri-Spark Classic Twin Positive Earth and Two 6 volt Ignition Coils

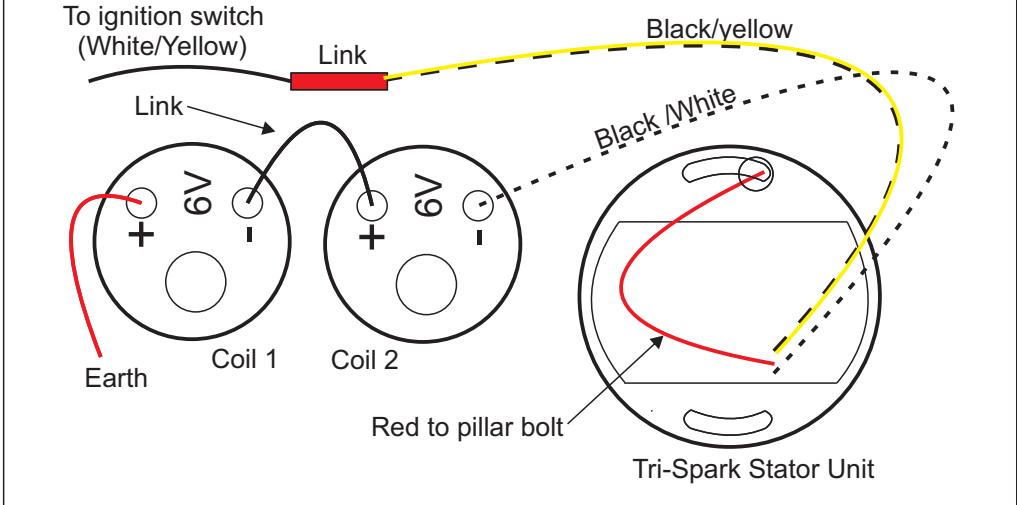

Wiring Diagram - Tri-Spark Classic Twin Negative Earth and Two 6 volt Ignition Coils

Note: The terminals for the Red and Black/Yellow wires must be swapped

